




PRISTINE™ T2 Task Lighting Installation Instructions

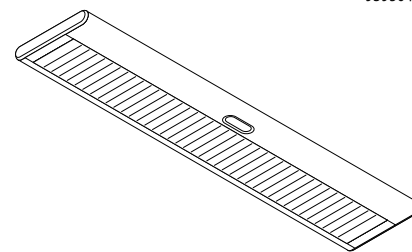

- 1** Find the center and mark holes as indicated. Drive screws into binder bin or shelf with shoulder washers. (Do not over drive screws)

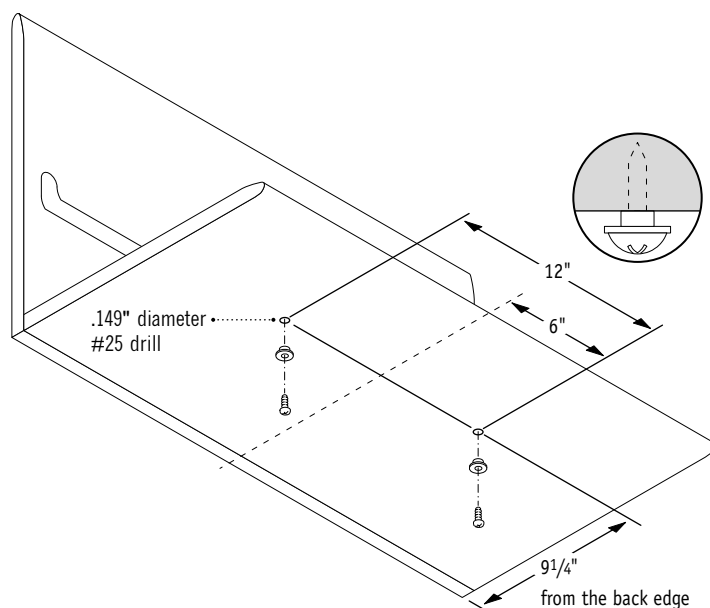

- 2** Position the light's keyhole slots over the screws, shift right to engage.

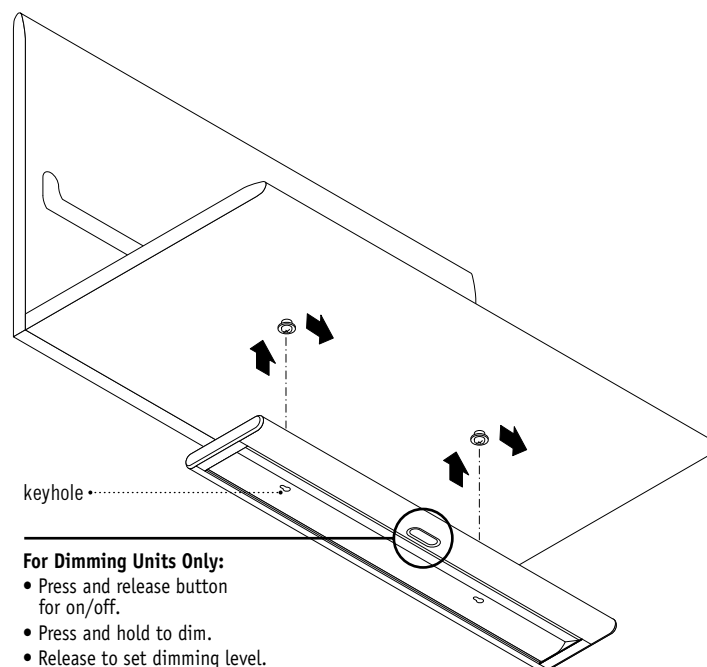

WARNING:
To Prevent Risk
of Electrical Shock . . .

- 1 All electrical installations must be done by qualified personnel in accordance with codes regulations applicable at the installation site.
- 2 Before beginning work, ensure that electrical power has been removed from the circuits that are being connected to or disconnected from.
- 3 Ensure that circuits to which the lights are connected are properly grounded and are the correct voltage.
- 4 To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

**45 Industrial Way
Wilmington, MA 01887**